

Tree Top Wireless Inspection Camera 5W – Feb.2019



Our extension pole mountable wireless camera is designed for inspecting nest or bat boxes & tree hollows.

Its Sony HAD camera transmits live video which can be viewed & recorded remotely on the handheld LCD monitor.

Powered by a Smart battery pack that provides up to 7 hours run time.

Mount the Battery Pouch:

Using 2 x cable ties, attach the battery pouch close to the top of the extension pole as shown in the above photo. Secure firmly to prevent pouch sliding downward.

Using the Inspection Camera:-

1. The Camera


Insert a charged *Smart* battery into the pouch. Screw the camera housing onto extension pole. Plug the USB power cable from the camera into the USB socket labelled **OUT** on the top of the *Smart* battery.

White led illuminator will come **ON** & the blue leds on *Smart* battery will be lit. Secure battery pouch flap.

2. The LCD Monitor

POWER UP CAMERA BEFORE THE LCD MONITOR.

Open the sun shade, hold down the **POWER** button for about 4 seconds release it when the LCD Monitor screen comes **ON**. Live video from the inspection camera should be visible.

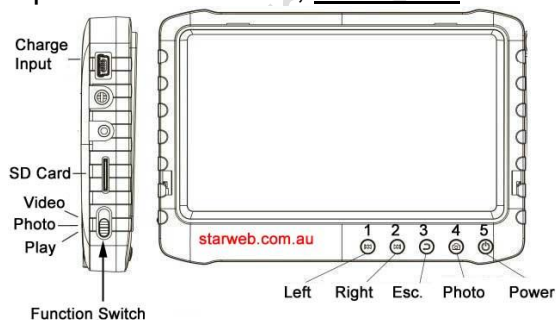

On Screen Displays:

Battery icon- 4 white bars = 100% charged. **SD card icon**- card installed & its free space. **Video / Camera icon**- recording mode photo or video. **Auto B8**- current operating frequency.

SET PHOTO or VIDEO OPTION:-

Slide the **Function** switch **UP** to record video or to the **Centre** position for photos.

CAPTURE A PHOTO or RECORD VIDEO:-

Press **Photo** button (4) to capture a photo. In **Video** mode - recording starts when the PHOTO button is pressed & is paused when the button is pressed again.

Mute:

Toggle audio On/Off by holding down the Esc button, a *Mute* message is displayed.

POWER OFF PROCEDURE:-

TURN OFF THE LCD MONITOR BEFORE THE CAMERA. Hold down the **POWER** button, release it when the LCD Monitor shuts **OFF**.

Unplug the camera's USB power cable from the top of the Smart battery pack.


DOWNLOAD PICTURES/ VIDEOS:-

1. With the LCD Monitor OFF eject the micro SD card, use a card reader to transfer required image files to your PC.
2. Connect the USB cable, turn monitor **ON** wait for **USB Connect ...**message. View files in folder **DCIM**. Turn monitor **OFF** disconnect the USB cable.

Changing the Date/ Time - LCD Monitor:-

Move the Function switch located on the side of the Monitor to the **PHOTO** position. Depress POWER button until the screen comes ON.

With **System** option highlighted press the Photo button to access the **System screen**, with Date Time highlighted press the Photo button again to access the **Date Time screen**.

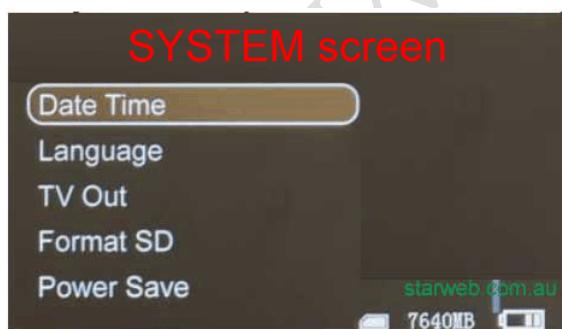

Editing the Date/ Time:

On the **Date Time screen** – year is highlighted red - Use the Left Right buttons 1 & 2 to increase/ decrease the year, press Photo button to accept the change & move to the month option. Left Right buttons to increase/ decrease the month & Photo button to save, repeat this procedure edit the other settings. Press **Escape** button 3 to save new Date Time & exit.

Move the Function switch back to either Photo or Video when finished.

Smart - Battery CHARGING PROCEDURE:

Smart battery will automatically switch **OFF** when it becomes discharged during use. To turn camera OFF press Smart battery button twice or unplug camera's USB cable from battery.



CHARGING: Connect a 5 volt/ 2 amp phone charger to the **USB micro** socket labelled **IN** on the top of the Smart battery. Charging is automatic; blue leds indicate progress, when fully charged 4 blue leds are lit. Charge time is around 3~4 hours.

Two USB sockets are located on the top: –

1. **IN** USB micro - **Charging Input** 5 volt DC (5v phone charger)
2. **OUT** USB type A - **Power to Camera** (camera connection only)

LCD Monitor CHARGING PROCEDURE:



- Monitor must be **OFF** during charging
- Connect a 5 volt/ 2amp USB phone charger into the USB mini charge input socket on the side of the monitor
- Maximum Charge time is 3~4 hours

Precautions:

- Do not leave devices unattended when charging
- Do not place on dashboard of vehicle – to avoid overheating
- Smart batteries & LCD Monitors are not waterproof
- Switch Camera **OFF** when not in use to avoid overheating & possible damage.
- Switch Monitor **OFF** when not in use to conserve battery power.

Charge every 3 months when not in use. Do not store devices in a discharged state for extended periods.

NO WARRANTY APPLIES FOR BATTERIES or DAMAGE RESULTING FROM BATTERY FAILURE.

Contact sales@starweb.com.au or Howard 0400755431

Website: www.starweb.com.au